


Procedure to do before
Installing the radio ATB switch
Assembly on the crane

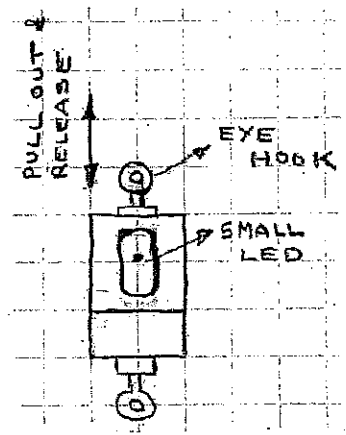

ON THE RADIO ATB SWITCH ASSEMBLY

1. Tighten the 3 screws with a 1/4" ALLEN key in order to activate the batteries.
2. Pull the Eye hook out; a very small LED red located on the surface side will turn on each time you pull and release this indicates your radio ATB switch works fine.

ON THE RADIO TWO BLOCK ALARM CONTROLLER

1. Turn the two block alarm controller off
2. Hold down the switch located on the controller panel in the *override/by pass* position and power back on.

The LED *two block* will turn on – and then- the LED *receiving status* will turn on – and then- the LED *Low battery* will turn on sequentially and rapidly, and finally the LED *two block* will stay on, at this moment release the control panel switch; the LED *Low battery* will turn on.

3. Flip the control panel switch to *rigging/test* position the LED *low battery* will turn off.
4. At this moment activate the radio ATB switch by pulling the eye hook out.
The LED *two block* will turn on blinking.
5. At this moment activate the radio ATB switch a second time by pulling the eye hook out.
The LED *receiving status* will turn on blinking for about 3 to 6 seconds.
6. At this moment, flip the control panel switch to the normal position.

The calibration is done.